

SPARK 1.1.3 SHORTCUTS BOARD

PANELS



Center **Main Panel**



Show **Pattern Panel**



Show **Song Panel**



Show **Preferences Panel**



Show **Studio Panel**



Show **Mixer Panel**



Show **Library Panel**



Show **Studio Panel**
background

SEQUENCER



Display **Tempo** on screen



Set **Metronome** on/off



Increase **Pattern Length**
by one mesure



Decrease **Pattern Length**
by one mesure



Temporarily increase or
decrease the **Tempo**
(DJ Mode)



Switch between **Quantize**
and **Unquantize** Rec Mode

INSTRUMENTS



Select **Instrument**



Set **Mute Mode** on
with no mute Recall



Set **Solo Mode** on
with no solo Recall



Enter **Copy Mode:**
-Copy Bank, press A then
B to copy Bank A to B
-Copy Pattern, press A
then 1, press B then 2 to
copy pattern A1 to B2



Change instrument
Parameter Knob
assignment